

X08128876

350 mm

280 mm

### Brief installation guide to roller washing machine

Please install the washing machine in accordance with the following steps. For details, please refer to the Installation Guide.

**Before use**

- Before use, the foam base and the foam inside the machine must be removed, and the rear transport bolts and sleeves should be removed; otherwise, noise and malfunction will occur.
- Do not connect any hot water source.
- The water injection test should be carried out on the washing machine before delivery. Therefore, if there is some residual water in the drum, it is normal. It is recommended to run a quick empty-drum washing program before the first use.
- Do not only wash a piece of clothing to prevent the unbalanced dewatering alarm.

**Remove the transport bolts**

- Remove the bolts
- Insert the bolts into the bolt holes again and tap the bolts to separate the sleeve from the rubber mat.
- Take out bolts, rubber mat and sleeve.
- Install the bolt hole cover.

There are a total of 4 transport bolts.

**Level the washing machine**

- Guarantee that the four bottom feet are in a tight state.
- Press the two diagonal lines at the top of the washing machine to inspect whether the machine is wobbling.
- Find out the foot that causes wobbling, and use a wrench to clockwise loosen the lock nut on the foot.
- Rotate the adjustable foot to the appropriate height and inspect whether the machine is wobbling again.
- After adjusting the height, lock the lock nut to the bottom of the box clockwise.

**Connect the inlet pipe**

Please use a stop tap for the water connection. Screw the inlet hose nut onto the inlet valve connector, tighten the inlet hose nut and turn the inlet hose slightly leftwards and rightwards to confirm whether it is fastened in place.

**Install the drain pipe**

Hang the U-shaped support for the drain pipe on the water channel or drain pipeline, and fix the highest point of the drain pipe at the height of 70-125cm.

**Control unit**

- Press the Power button.
- Select a cycle.
- Select desired option function.
- Press Start / Pause.
- Press and hold for 3 seconds to power off.

### Washing machine maintenance

After the completion of washing program, please be sure to turn off the tap and unplug the power cord to avoid accidents.

**Regularly clean the draining pump filter**

Clean the draining pump filter at least three to five times every year. Tip: make sure that the water has cooled before operation to avoid burns.

**Regularly clean inlet filter screen (please reserve the inlet filter screen)**

In case of slow water supply or water supply failure, please check and clean the inlet filter screen in time. The specific operation is as follows:

### Common code and solution

When the washing machine is not working normally and the display shows the following code, it may not be a fault. Please carry out the corresponding treatment according to the followings.

Problem/error	Indication on the display unit and problem description	What to do?
F01	Water inflow fault	Check the following: • Is the water supply tap open and is the pressure too low? • Is the water supply hose pinched? • Is the filter on the water supply hose clogged? • Is the hose frozen?
F03	Drainage fault	Check the following: • Is the hose pinched, does the water flow through it? • Is the filter on the drain hose clogged? • Is the hose frozen?
F04 / F05 / F06 / F07 / F23	Electronic module fault	Switch off the appliance; Press the "Power" for 2 seconds. Press the "start/pause" button again. If the error reoccurs, call a service technician.
F24	Water level reaches overflow level	Stop the programme by pressing the "start/pause" button. Restart the programme. If the appliance continues to pump water into the tub, close the water tap and call a service technician.
F13	Error while locking the door	Door is closed, but it cannot be locked. Switch off the washing machine. Switch it back on and restart the washing programme. If the error reoccurs, call a service technician.
F14	Error while unlocking the door	Door is closed, but it cannot be unlocked. Turn off the appliance, then turn it back on. If the error reoccurs, call a service technician.
Urb	Unb Unbalance alarm	Unbalance alarm shall be solved by the following methods: 1. Laundry winding Press the "Power" for 2 seconds to shutdown the washing machine, open the door, shake the clothes and put them back into the washing machine, then select the single dewatering program to dry again. 2. Too light-weighted laundry Press the "Power" for 2 seconds for shutdown, open the door, put in one or two towels, and then select the single dewatering program to try again.

If you have any question in use, please contact 1 800 447 367 (AU) or 0800 444 736 (NZ). 2316150-X08128876A

2316150

## 技术要求

- 印刷纸张尺寸为350×280 mm, 80g双胶纸黑, 白印刷, 要求内容正确, 清楚;
- 颜色及整体效果必须经过研发部确认后方能生产, 产品检验已封样件为准;
- 未注公差按GB/T 1804-m;
- 符合Q/HKB J 16001《零, 部件及原材料中有害物质含量规定》要求。

借(通)用件登记  
旧底图总号  
底图总号  
出图审查  
日期

		80g双胶纸		洗衣机研发部	
版本号	A	更改单编号	重量	比例	注意标贴
设计	邱良顺 2023.1.29	会签	第1张	1:2	
审核	刘松 2023.1.29	会签	共1张		X08128876
工艺	匡永坤 2023.1.29		图形识别符号		
标准化	程木聪 2023.1.29	批准	崔维明 2023.1.29		