

N6020000749

1:1美工稿

350 mm

280 mm

### Brief installation guide to roller washing machine

Please install the washing machine in accordance with the following steps. For details, please refer to the Installation Guide.

**Before use**

- Before installation, the foam base and the foam inside the machine must be removed.
- Before use, the rear transport bolts and sleeves should be removed; otherwise, noise and malfunction will occur.
- Do not connect any hot water source.
- The water injection test should be carried out on the washing machine before delivery. Therefore, if there is some residual water in the drum, it is normal. It is recommended to run a quick empty-drum washing program before the first use.
- Do not only wash a piece of clothing to prevent the unbalanced dewatering alarm.

**Remove the transport bolts**

- Remove the bolts
- Insert the bolts into the bolt holes again and tap the bolts to separate the sleeves from the rubber mat.
- Take out bolts, rubber mat and sleeve.
- Install the bolt hole cover.

There are a total of 4 transport bolts.

**Level the washing machine**

- Guarantee that the four diagonal lines at the bottom feet are in a tight state.
- Press the two diagonal lines at the top of the washing machine to inspect whether the machine is wobbling.
- Find out the foot that causes wobbling, and use a wrench to clockwise loosen the lock nut on the foot.
- Rotate the adjustable foot to the appropriate height and inspect whether the machine is wobbling again.
- After adjusting the height, lock the lock nut to the bottom of the box clockwise.

**Connect the inlet pipe**

Please use a stop tap for the water connection. Screw the inlet hose nut onto the inlet valve connector, tighten the inlet hose nut and turn the inlet hose slightly leftwards and rightwards to confirm whether it is fastened in place.

Screw the inlet hose nut onto the stop tap, tighten the nut, and turn the hose slightly leftwards and rightwards to confirm whether it is securely fastened in place.

**Install the drain pipe**

Hang the U-shaped support for the drain pipe on the water channel or drain pipeline, and fix the highest point of the drain pipe at the height of 70-125cm.

**Control unit**

Icon	Description
	Used to turn on/off the appliance.
	Used to start/pause a program.
	Tap to return to the previous interface; long press to return to the main interface.
	Tap to enter the selection of additional functions; long press to enter the system function settings.
	Used to confirm the current selection.
	This icon is displayed when the appliance is connected to the network.
	This icon is displayed when the Remote Control function is turned on.
	This icon is displayed when the door is locked.
	Press here, pull out, and clean the lint filter.

### Wi-Fi connection

- Open ConnectLife on your smartphone or tablet.
- Bind your appliance in ConnectLife as follows:
  - Click the "+" on the "Home" interface, then select "Add device" or "Scan".
  - Choose "Washing Machine" or click "Scan QR/Barcode" or "Manual entry".
  - Scan the "QR/Barcode" on the appliance or manually enter the device "AUTOID". If you cannot find it, click "I?". For instructions.
  - Read the instructions and operate the appliance until it switches to "Networking" or "Binding" status, then click "NEXT".
  - The APP starts searching for the appliance. You can select the desired appliance from the search list. If not found, please check if your Bluetooth is activated. Keep Bluetooth in active mode, then click "NEXT".
  - Select your home Wi-Fi, enter the password and click "CONNECT". The appliance starts the connecting and binding process.
  - After successful binding, you can set the name of the appliance and the room in which it is located.
  - The appliance can now be controlled remotely via the APP.

**Start/Pause**

Start/pause the program.

If the door is not closed or locked, an alarm will be displayed on the screen after pressing "Start".

NOTE:  
Australia and New Zealand Market-Specific Start-up Operation:  
For child safety, tapping the "Start/Pause" button will display a prompt: "OK/CANCEL".

- Select "OK" and tap to confirm. The device starts.
- Turn the main knob to select "CANCEL" and tap to confirm. The device does not start, and the prompt box closes.

After the prompt box appears, if no action is taken within 60 seconds, the prompt box will close automatically. Tapping the "Start/Pause" button again will bring up the prompt box once more. During the prompt box popup, only "OK/CANCEL" operations or long-pressing the Power button to turn off are allowed.

If the door is not closed, a prompt will display on the screen to alert the user after starting the device. "Please close the door and retry".

### Washing machine maintenance

After the completion of washing program, please be sure to turn off the tap and unplug the power cord to avoid accidents.

**Regularly clean the draining pump filter**

Clean the draining pump filter at least three to five times every year. Tip: make sure that the water has cooled before operation to avoid burns.

Under the condition that the water in the washing machine has been drained off and the power source has been disconnected, insert the stir type screwdriver into the hole on the front panel to open the filter door.

Place a flat container under the filter door, pull out the emergency drain pipe, and remove the pipe after pulling the water down of manually. Then, counterclockwise rotate and take down the filter (or remove the emergency drain pipe, damage can be avoided through filter loosening).

Clean the filter, remove sundries in the inner cavity of the draining pump, and then install the filter by clockwise rotation.

Inject 1 liter of water into the washing machine drum, check whether the filter is installed in place, whether water leakage exists, after confirmation, make the filter door return to its original position.

**Regularly clean inlet filter screen (please reserve the inlet filter screen)**

In case of slow water supply or water supply failure, please check and clean the inlet filter screen in time. The specific operation is as follows:

Unscrew the inlet pipe. Take out the filter screen. Clean the filter screen. Install the filter screen. Connect the inlet pipe.

### Common code and solution

When the washing machine is not working normally and the display shows the following code, it may not be a fault. Please carry out the corresponding treatment according to the followings.

Display code	Abnormal phenomenon	Recommended solution
F01	Water supply abnormality	Whether the tap is fully open and has sufficient water pressure, whether the inlet pipe is frozen, knotted or blocked (refer to the "Maintenance" in the Manual). After eliminating the above fault, press "Start/Pause" to continue the operation. If the fault occurs again, unplug the power cord and contact the after-sales service department.
F03	Water drainage abnormality	Water in the washing machine drum is not drained off. Shut down the machine for inspection; inspect whether the draining pump is blocked and whether the drain pipe is frozen or knotted. After eliminating the above fault, press "Start/Pause" to continue the operation. If the fault occurs again, unplug the power cord and contact the after-sales service department.
F13	Lock abnormality	Normal locking or unlocking cannot be achieved. Inspect whether the door is closed or not. Press "Start/Pause" to relieve the fault and open or lock the door again. If the fault occurs again, unplug the power cord and contact the after-sales service department.
F24	Too high water level	Press "Start/Pause" to relieve the fault and resume the water supply operation. If the fault occurs again, unplug the power cord and contact the after-sales service department.
F99	Soap box closing failure	After closing the soap box in place, press "Start/Pause" to relieve the fault and resume program operation. If the fault occurs again, unplug the power cord and contact the after-sales service department. (Note: this code applies to some automatic adding types)
Others	Electronic module fault	Press the "On/Off" for 3 seconds to shut down the machine, and then turn on the machine after 10 seconds to eliminate this fault. If the fault occurs again, unplug the power cord and contact the after-sales service department.
PLUTO	Automatic weighing	Indicate that the washing machine is automatically weighing the clothing, and no user operation is required.
Unb	Unbalanced dewatering alarm	Press the "On/Off" for 3 seconds to shut down the machine, open the machine door, untangle the tangled clothing, and select single dewatering program for dewatering.
End	The end of the program	The screen displays "End", indicating that the washing process is completed.

If you have any question in use, please contact 1 800 447 367 (AU) or 0800 444 736 (NZ)

20104597-N6020000749A

20104597

## 技术要求

- 印刷纸张尺寸为350×280 mm, 80g双胶纸黑, 白印刷, 要求内容正确, 清楚;
- 颜色及整体效果必须经过研发部确认后方能生产, 产品检验已封样件为准;
- 未注公差按GB/T 1804-m;
- 符合Q/HKB J 16001《零, 部件及原材料中有害物质含量规定》要求。

借(通)用件登记

旧底图总号

底图总号

出图审查

日期

		80g双胶纸		洗衣机研发部	
版本号	A	更改单编号	重量	比例	注意标贴
设计	魏爽 2025.7.29	会签	第1张	共1张	
审核	刘松 2025.7.29	会签			F
工艺	冯超 2025.7.29			N6020000749	
标准化	程木聪 2025.7.29	批准	崔维明 2025.7.29		